

Your Gateway To Outdoor Adventure



Cabin #8

How to use the Fireplace (Turned off April 1 – October 1)

Fireplace Model# ProCom

For the gas fireplace there is a knob under the fireplace. Do not turn the knob to OFF, we might not be able to relight the pilot light if you turn it off. For flame control, just turn the knob up or down (LO to HI). There is a \$75 relight fee if you turn off the fireplace.

